

H.C.B-A2274 CAM AND CRANKSHAFT SEAL PULLER



* Engage the adjustable hook behind the seal. * Brace the push rod against the engine head then push the handle to remove the seal. * Remove the seal easily & quickly without damage to the cam & crank shaft.

Rating: Not Rated Yet
Price:

Sales price:
Discount:

[Ask a question about this product](#)
Manufacturer: [HCB Specialty Tools](#)

Description

